



Português

BUS	Conector de espera	L19 L35
D26	Diodo cheque lampada H38	L17
F5	Fusível KL.15	K21 K38
F7	Fusível KL.15	K44
F13	Fusível KL.15	K43
F27	Fusível KL.30	K24
F29	Fusível KL.30	K1
FZ	Fusível principal	E18
G19	Bateria	E2 F2
G20	Alternador	C11
G20(2)	Alternador	C13
K2	Relé auxiliar do terminal 15	C37
K2(2)	Relé auxiliar do terminal 15 (II)	B42
K3	Relé auxiliar farois baixos	L15
K4	Réle auxiliar do farol alto	L26
K27	Réle auxiliar do terminal 58	L29
K37	Relé auxiliar D+	L11
K33(3)	Relé de desligamento da iluminação na partida	C31
M13	Motor de Partida	C8

P18	Painel de instrumentos	L13 L23
Q1	Interruptor geral da bateria	B2
Q2	Chave de contato e partida	C26
S1	Interruptor geral da luz	L40
U16	Módulo PLD	L7 L33
U27	Módulo ADM	L9 L31
Z4	Conector chassis - central elétrica	C5 C21

BUS	Conector de espera	L19 L35
D26	Diodo comprobar lampara H38	L17
F5	Fusible KL.15	K21 K38
F7	Fusible KL.15	K44
F13	Fusible KL.15	K43
F27	Fusible KL.30	K24
F29	Fusible KL.30	K1
FZ	Fusible principal	E18
G19	Bateria	E2 F2
G20	Alternador	C11
G20(2)	Alternador	C13
K2	Relé auxiliar del terminal 15	C37
K2(2)	Relé auxiliar del terminal 15 (II)	B42
K3	Relé auxiliar del faros cruce	L15
K4	Relé auxiliar del faros carretera	L26
K27	Relé auxiliar del terminal 58	L29
K37	Relé auxiliar D+	L11
K33(3)	Relé de interrupción de la iluminación en el arranque	C31
M13	Motor de arranque	C8

Español

P18	Tablero de instrumentos	L13 L23
Q1	Interruptor general de la batería	B2
Q2	Chave de contato y partida	C26
S1	Interruptor general de las luces	L40
U16	Módulo PLD	L7 L33
U27	Módulo ADM	L9 L31
Z4	Conector chassis - central eléctrica	C5 C21

BUS	Spare connector	L19 L35
D26	Check diode lamp H38	L17
F5	Fuse KL.15	K21 K38
F7	Fuse KL.15	K44
F13	Fuse KL.15	K43
F27	Fuse KL.30	K24
F29	Fuse KL.30	K1
FZ	Main fuse	E18
G19	Battery	E2 F2
G20	Alternator	C11
G20(2)	Alternator	C13
K2	Auxiliary relay terminal 15	C37
K2(2)	Auxiliary relay terminal 15 (II)	B42
K3	Auxiliary relay low beam	L15
K4	Auxiliary relay high beam	L26
K27	Auxiliary relay terminal 58	L29
K37	D+ auxiliary relay	L11
K33(3)	Lighting shutdown relay on start	C31
M13	Starter motor	C8

English

P18	Instrument cluster	L13 L23
Q1	Battery general switch	B2
Q2	Ignition switch	C26
S1	General light switch	L40
U16	PLD module	L7 L33
U27	ADM module	L9 L31
Z4	Chassis - power plant plug	C5 C21

Bateria, alimentação de tensão
Batería, alimentación de tensión
Battery, power supply
PE54.10-B-2000BK