

GROUP 54-05
INDICATOR AND WARNING LAMP
CIRCUIT


510 PARKING BRAKE INDICATOR CIRCUIT

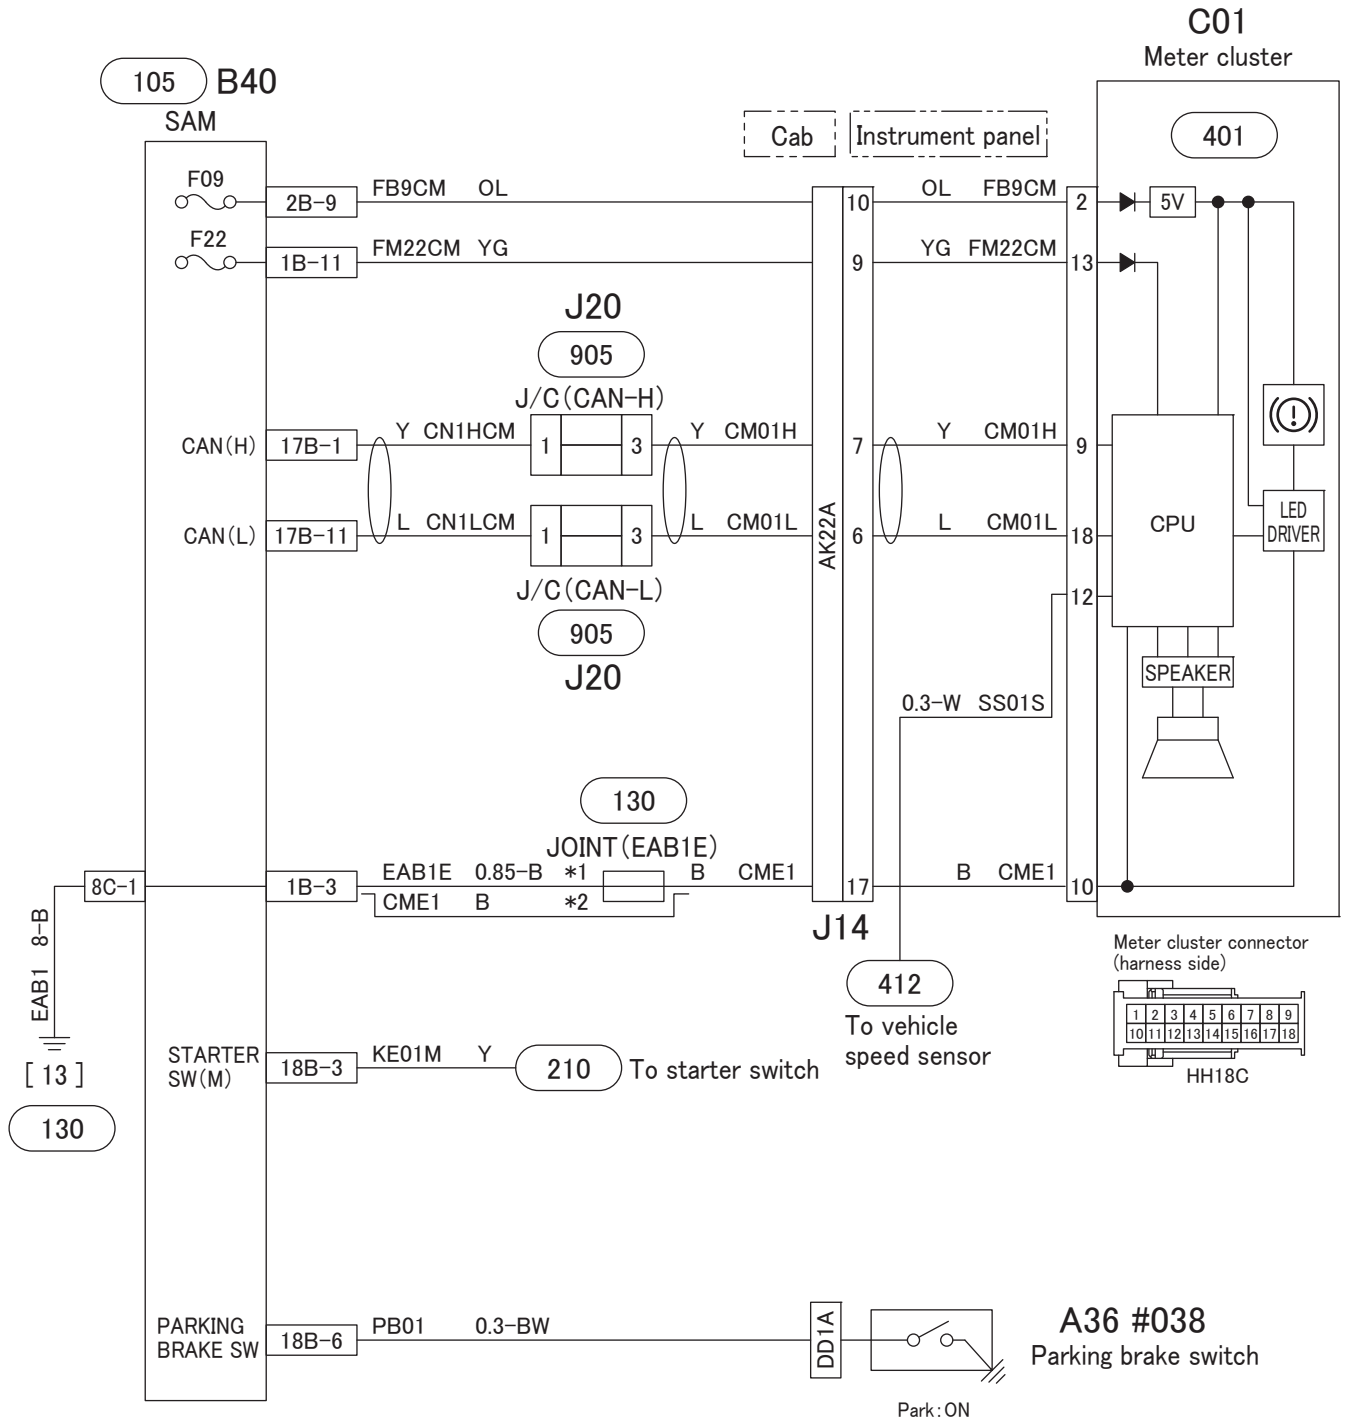


*1: With SRS airbag or ISS
 *2: Except *1

ISS: Idling stop and start system
 SRS: Supplemental restraint system

SAM connector (harness side)

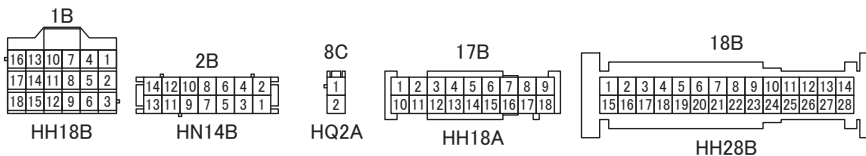


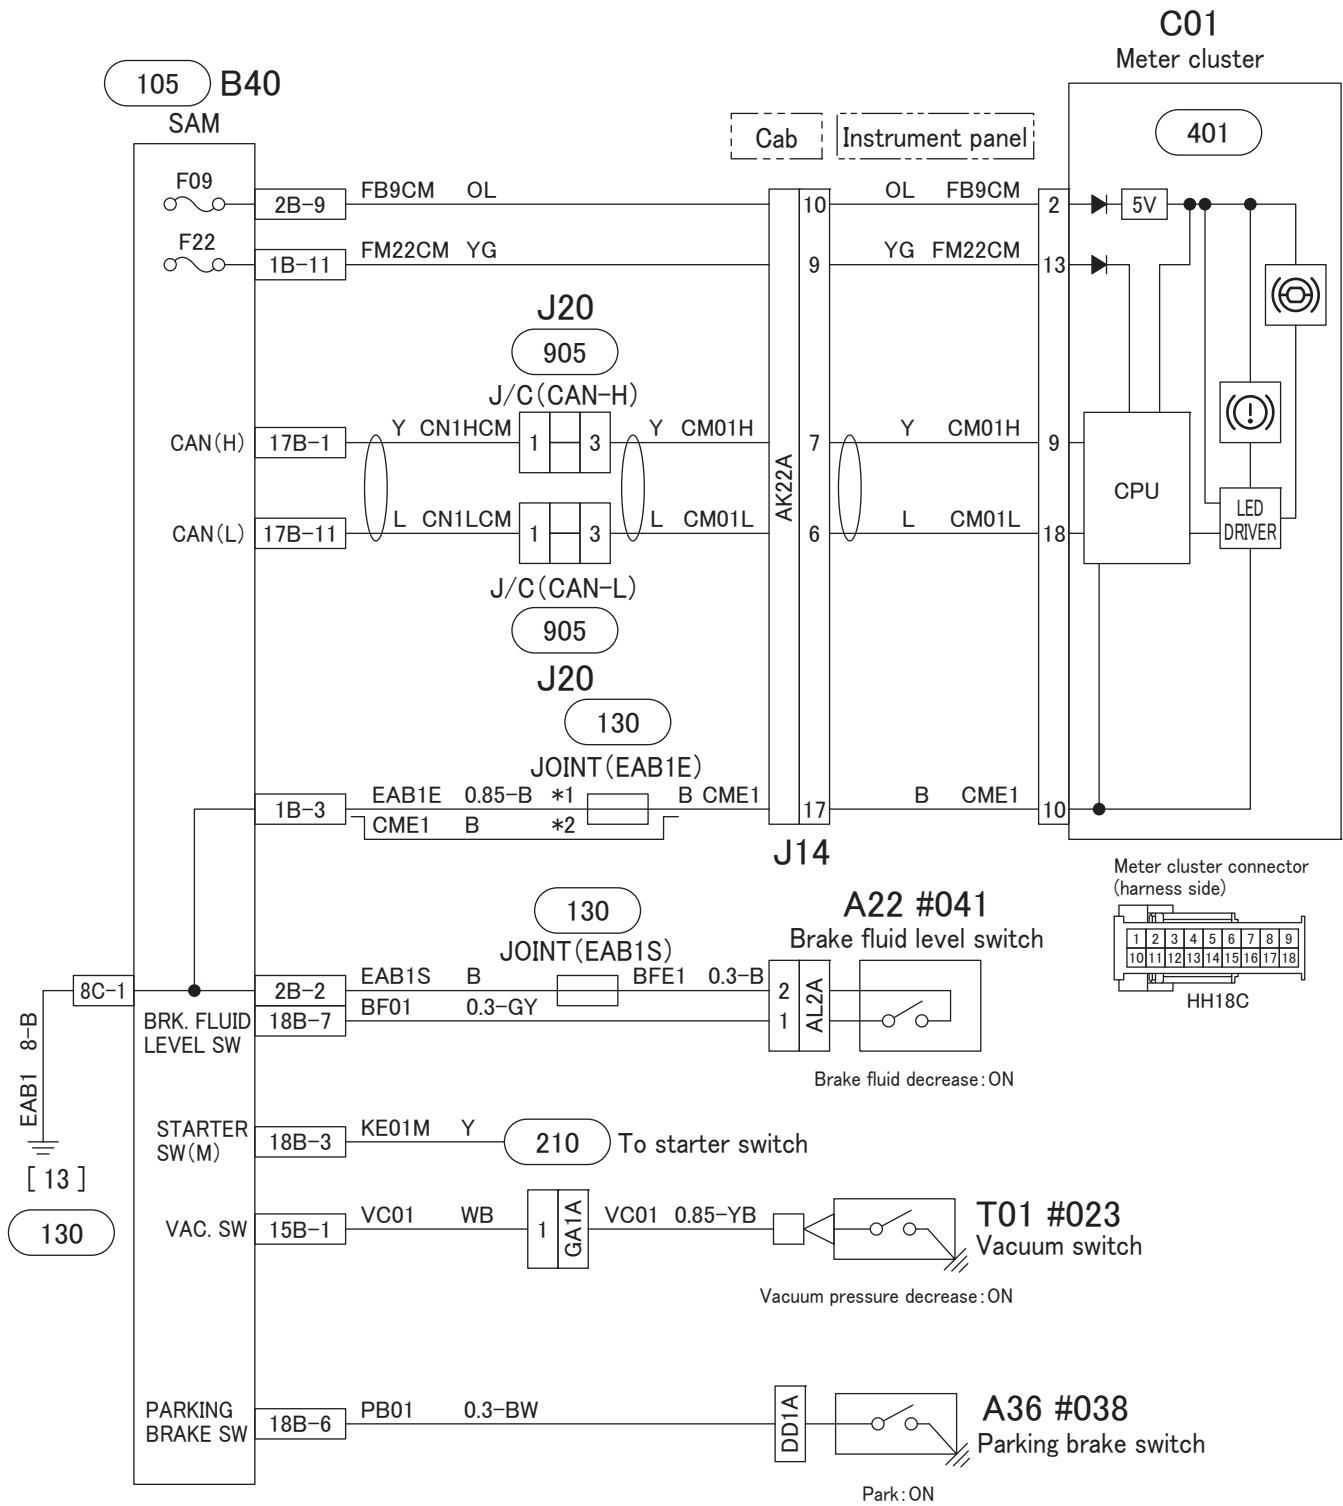


*1: With SRS airbag or ISS
 *2: Except *1

ISS: Idling stop and start system
 SRS: Supplemental restraint system


SAM connector (harness side)

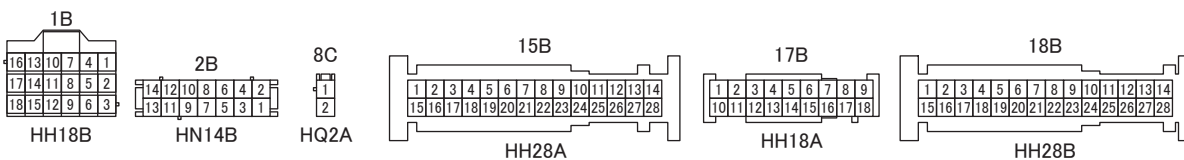


536 ENGINE OIL PRESSURE WARNING CIRCUIT

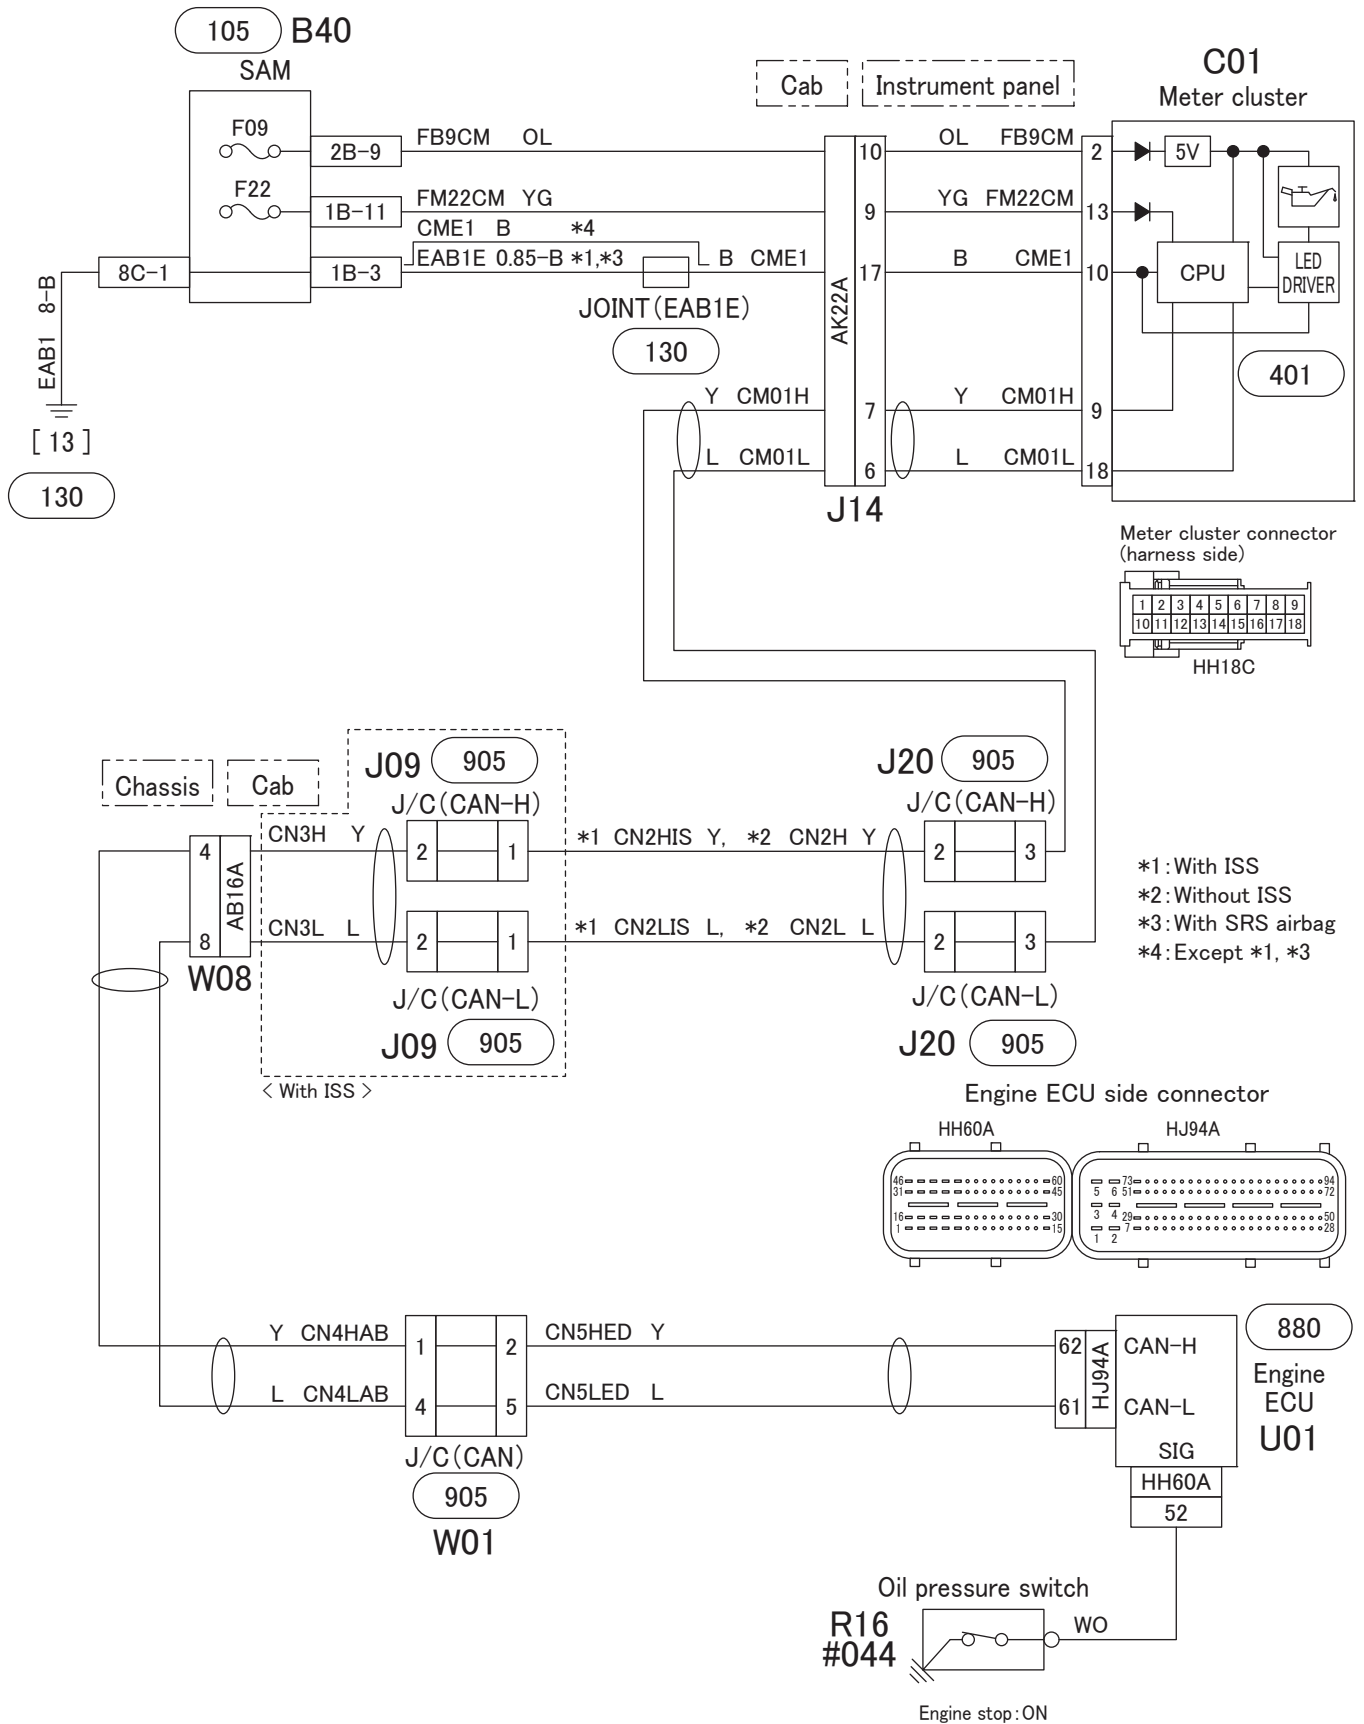

SAM connector (harness side)

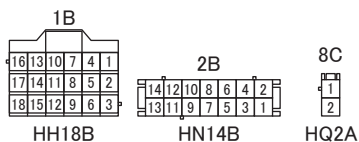


ECU: Electronic control unit
 ISS: Idling stop and start system
 SRS: Supplemental restraint system

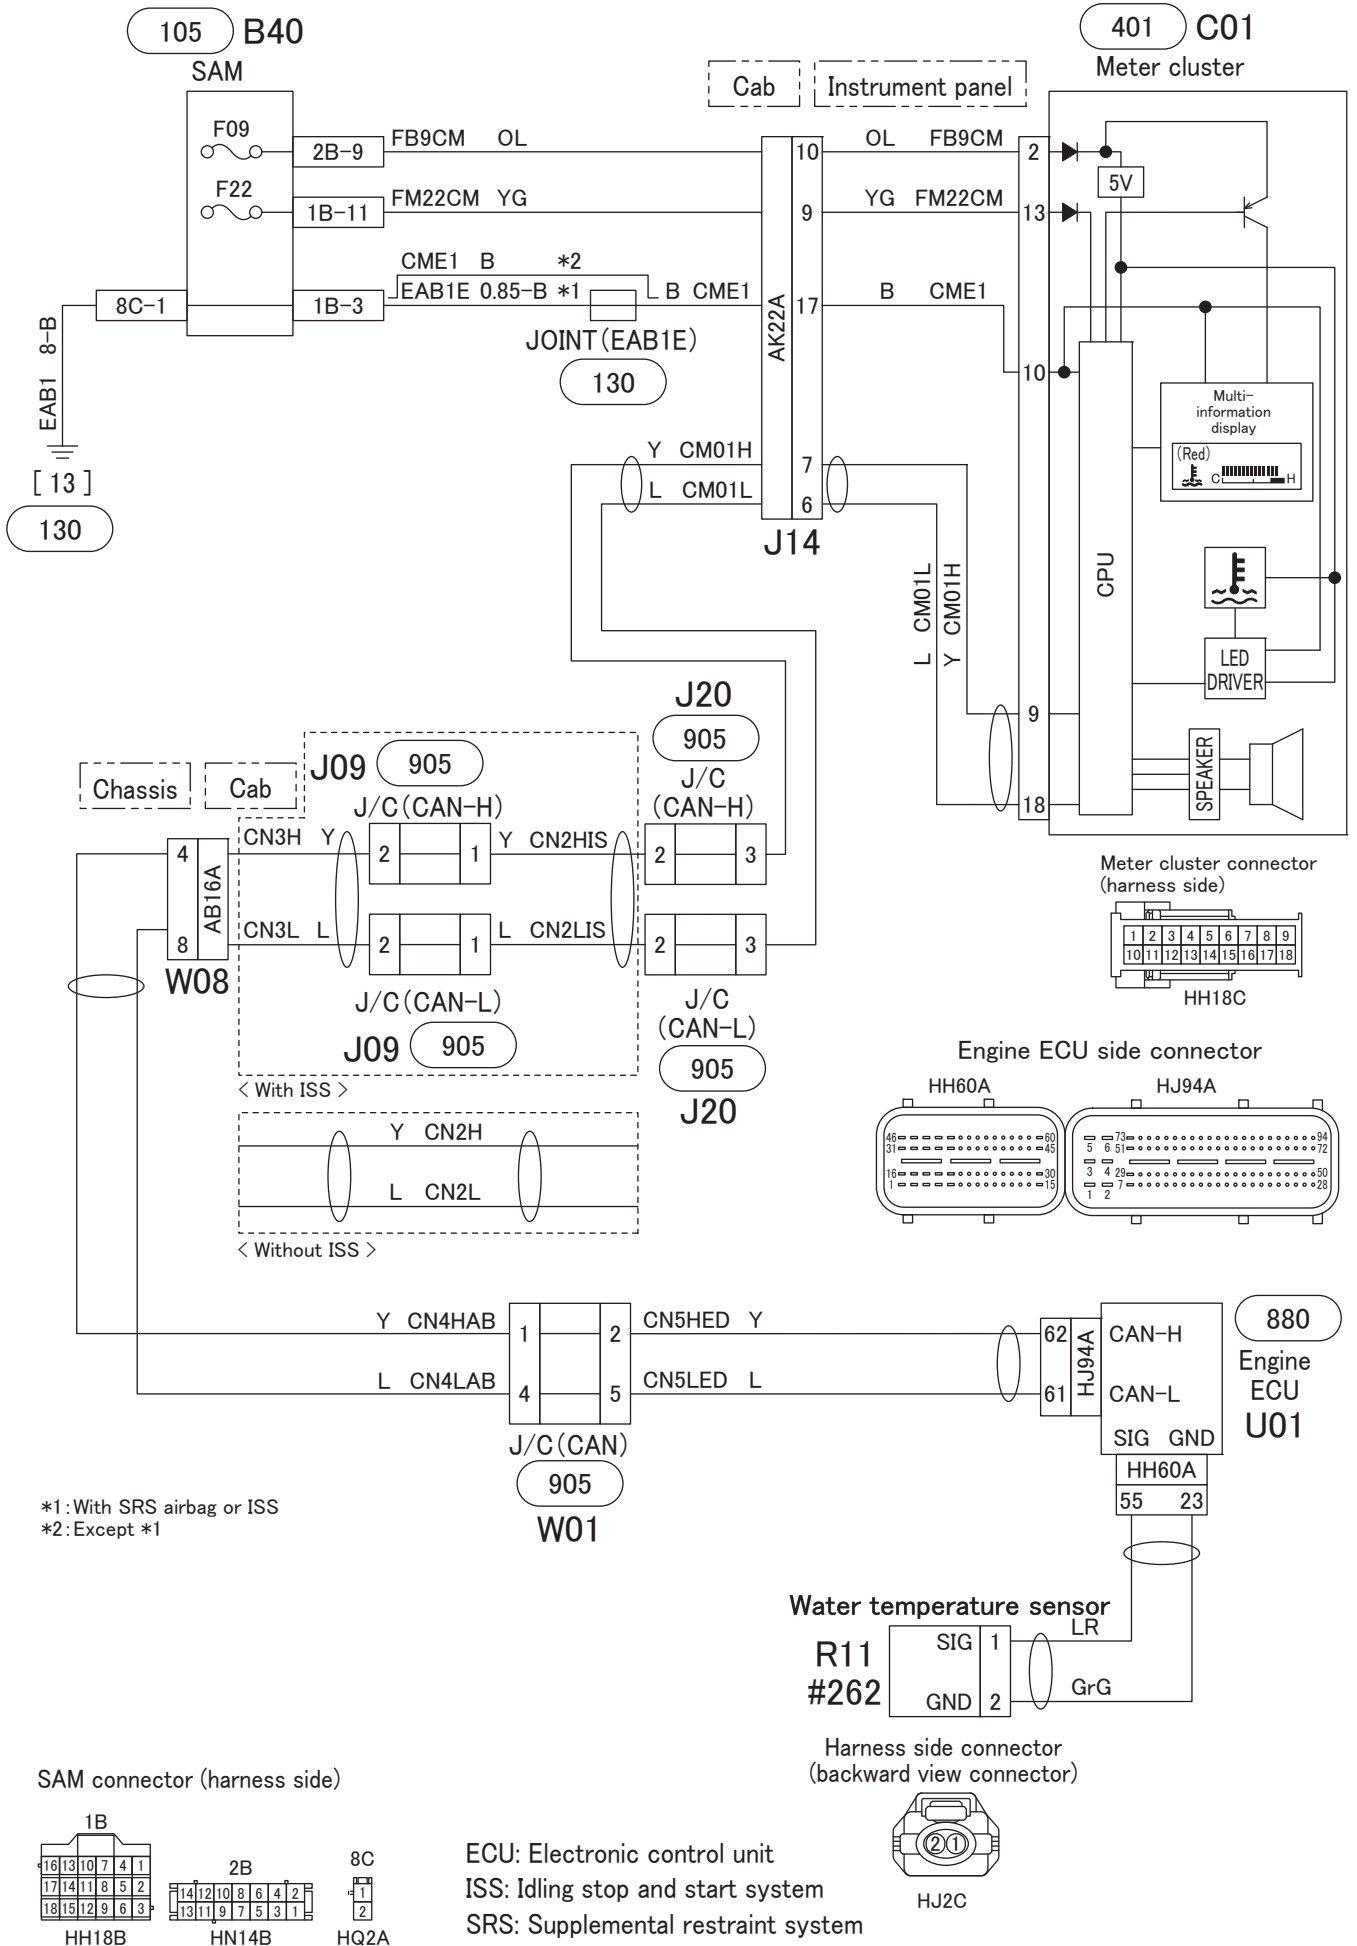

*1: With SRS airbag or ISS
 *2: Except *1

566 FUEL FILTER CIRCUIT

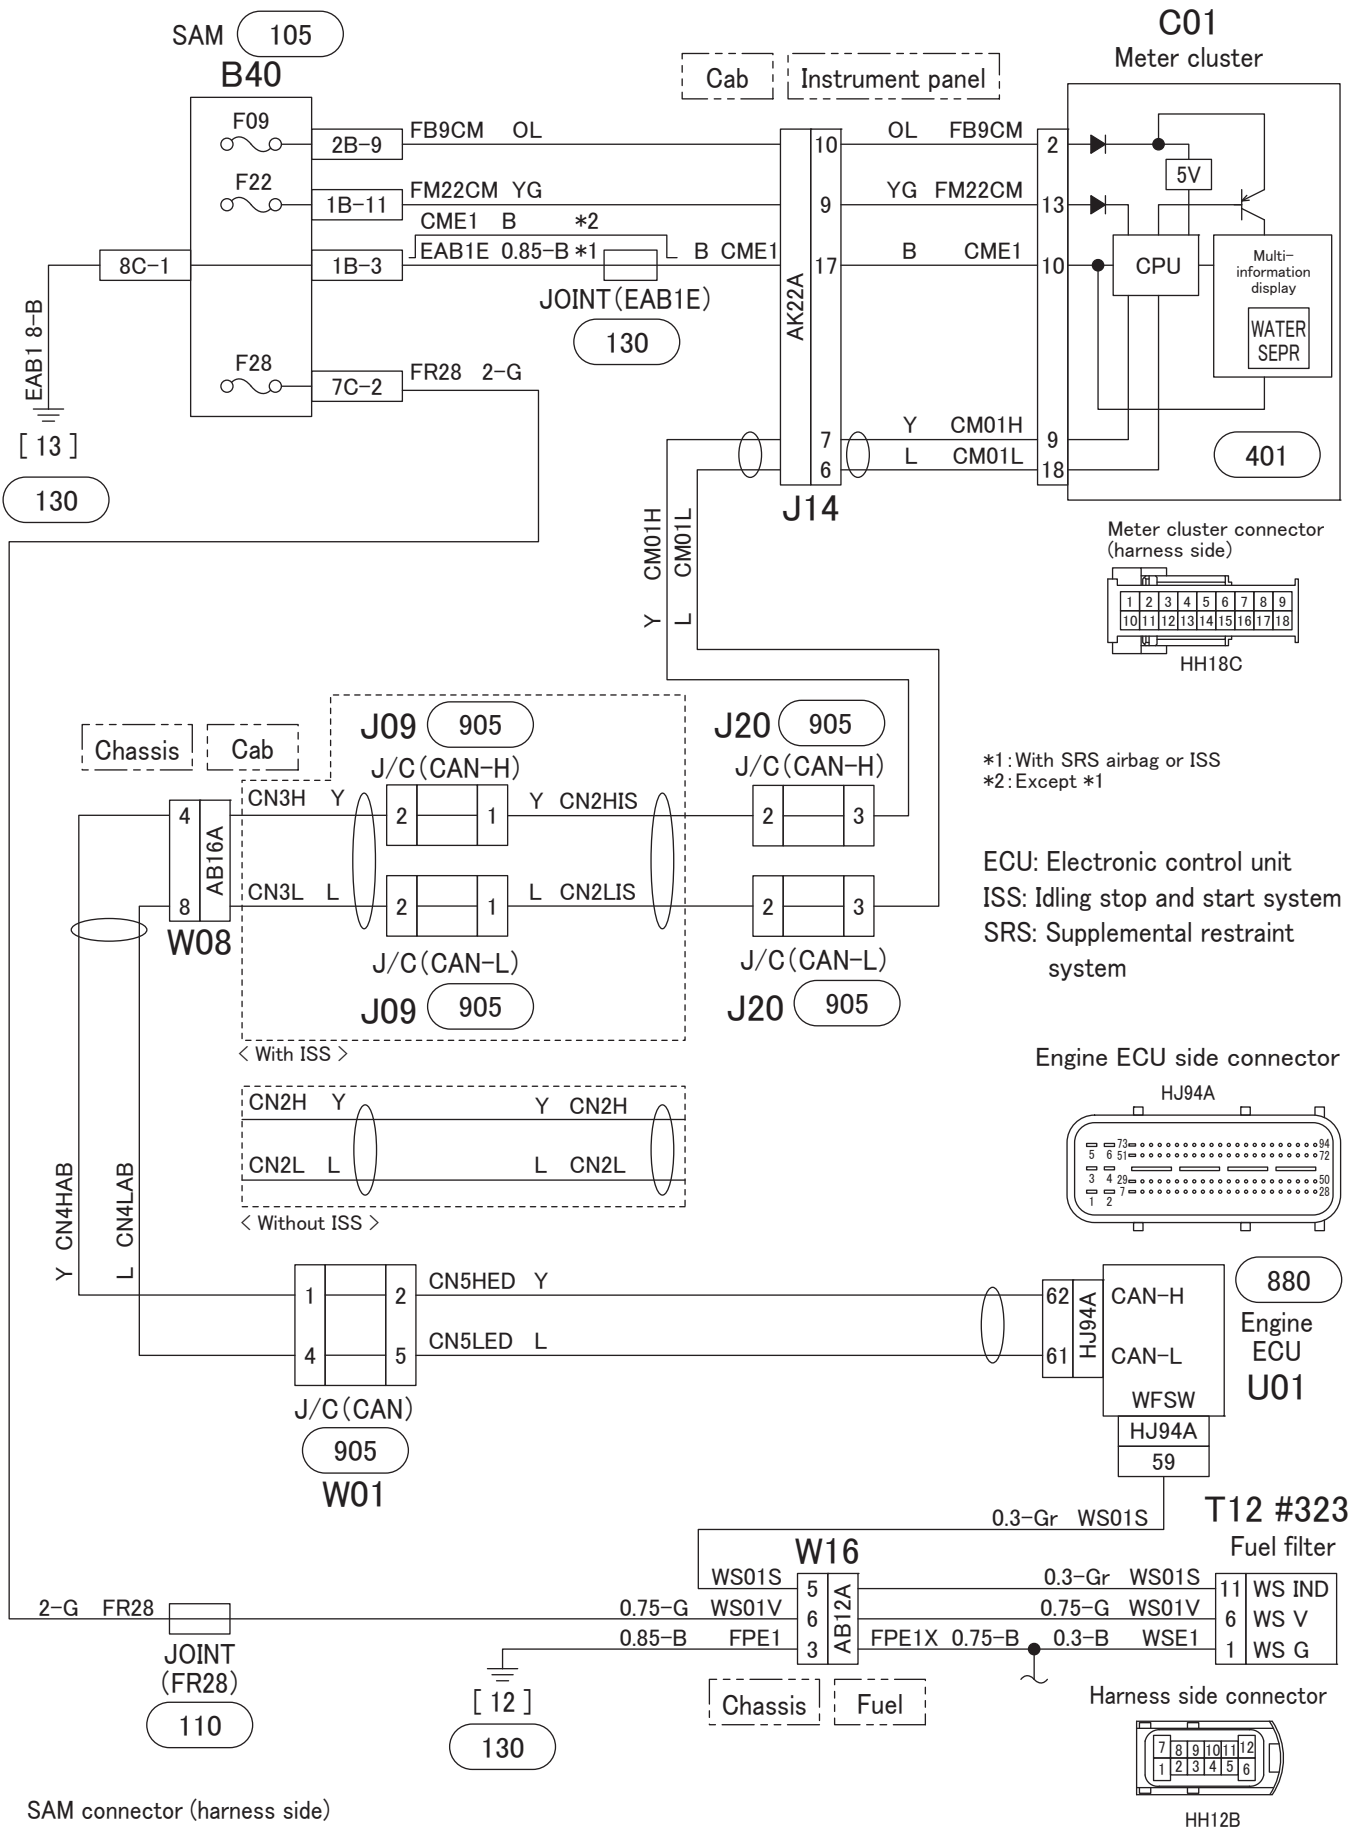

SAM connector (harness side)

