

# **CANTER**

## **(EURO 5. EURO V)**

**For Chile**

# **Shop Manual**

## **electrical**

### **FOREWORD**

This Shop Manual is published for the information and guidance of personnel responsible for maintenance of Mitsubishi Fuso CANTER series trucks, and includes procedures for adjustment and maintenance services.

We earnestly look forward to seeing that this manual is made full use of in order to perform correct services with no wastage.

For more details, please consult your nearest authorized Mitsubishi Fuso dealer or distributors.

Kindly note that the specifications and maintenance service figures are subject to change without prior notice in line with improvement which will be effected from time to time in the future.

APRIL 2018

Applicable models  
FE, FG

## **GROUP INDEX**

<b>GENERAL .....</b>	<b>54-00A</b>
<b>SPECIFICATIONS .....</b>	<b>54-00B</b>
<b>STRUCTURE AND OPERATION .....</b>	<b>54-00C</b>
<b>TROUBLESHOOTING .....</b>	<b>54-00D</b>
<b>POWER, CHARGE AND GROUND CIRCUIT .....</b>	<b>54-01</b>
<b>ENGINE STARTING, STOPPING AND PREHEATING CIRCUIT .....</b>	<b>54-02</b>
<b>LIGHTING CIRCUIT .....</b>	<b>54-03</b>
<b>METER CIRCUIT .....</b>	<b>54-04</b>
<b>INDICATOR AND WARNING LAMP CIRCUIT .....</b>	<b>54-05</b>
<b>CAB SIDE ELECTRICAL CIRCUIT .....</b>	<b>54-06</b>
<b>CHASSIS SIDE ELECTRICAL CIRCUIT .....</b>	<b>54-07</b>
<b>ENGINE AND TRANSMISSION SIDE ELECTRICAL CIRCUIT .....</b>	<b>54-08</b>
<b>OTHER CIRCUIT .....</b>	<b>54-09</b>
<b>ELECTRICAL EQUIPMENT INSTALLATION POSITIONS .....</b>	<b>54-10</b>
<b>INSPECTION OF ELECTRICAL EQUIPMENT .....</b>	<b>54-11</b>
<b>STARTER AND ALTERNATOR .....</b>	<b>54-12</b>
<b>ON-VEHICLE INSPECTION AND ADJUSTMENT .....</b>	<b>54-13</b>
<b>CONNECTOR CONFIGURATION CHART .....</b>	<b>54-14</b>
<b>IDLING STOP AND START SYSTEM .....</b>	<b>54EA</b>
<b>METER CLUSTER .....</b>	<b>54EM</b>
<b>SIGNAL DETECTED AND ACTUATION MODULES .....</b>	<b>54ES</b>

This Shop Manual contains the information classified into the following groups.

If any system or equipment has two or more variations with significantly different construction, the variations are handled as different groups. These groups are identified by different alphabets preceded by the same number.

### 1. ENGINE volume (Pub.No.00ELT0143)

Group No.	Group subject
00	GENERAL
11	ENGINE
12	LUBRICATION
13	FUEL AND ENGINE CONTROL
13E	ENGINE CONTROL
14	COOLING
15	INTAKE AND EXHAUST
17	EMISSION CONTROL
17E	DPF (Diesel Particulate Filter) SYSTEM

### 2. CHASSIS volume (Pub.No.00ELT0144)

Group No.	Group subject
00	GENERAL
21	CLUTCH
22	TRANSMISSION
25	PROPELLER SHAFT
26	FRONT AXLE
27	REAR AXLE
31	WHEEL, TIRE
33	FRONT SUSPENSION
34	REAR SUSPENSION
35	BRAKE
35E	ANTI-LOCK BRAKE SYSTEM (ABS)
36	PARKING BRAKE
37	STEERING
41	BUMPER, FRAME
42	CAB MOUNTING, TILT
43	DOOR
51	EXTERIOR
52	INTERIOR
52E	SUPPLEMENTAL RESTRAINT SYSTEM (SRS) AIRBAG
55	HEATER

### 3. ELECTRICAL volume (Pub.No.00ELT0145)

Group No.	Group subject
54	ELECTRICAL
54EA	IDLING STOP AND START SYSTEM
54EM	METER CLUSTER
54ES	SIGNAL DETECTED AND ACTUATION MODULES