

GROUP 54-02
ENGINE STARTING, STOPPING
AND PREHEATING CIRCUIT


210 ENGINE STARTING CIRCUIT

*1: With ISS
 *2: Without ISS

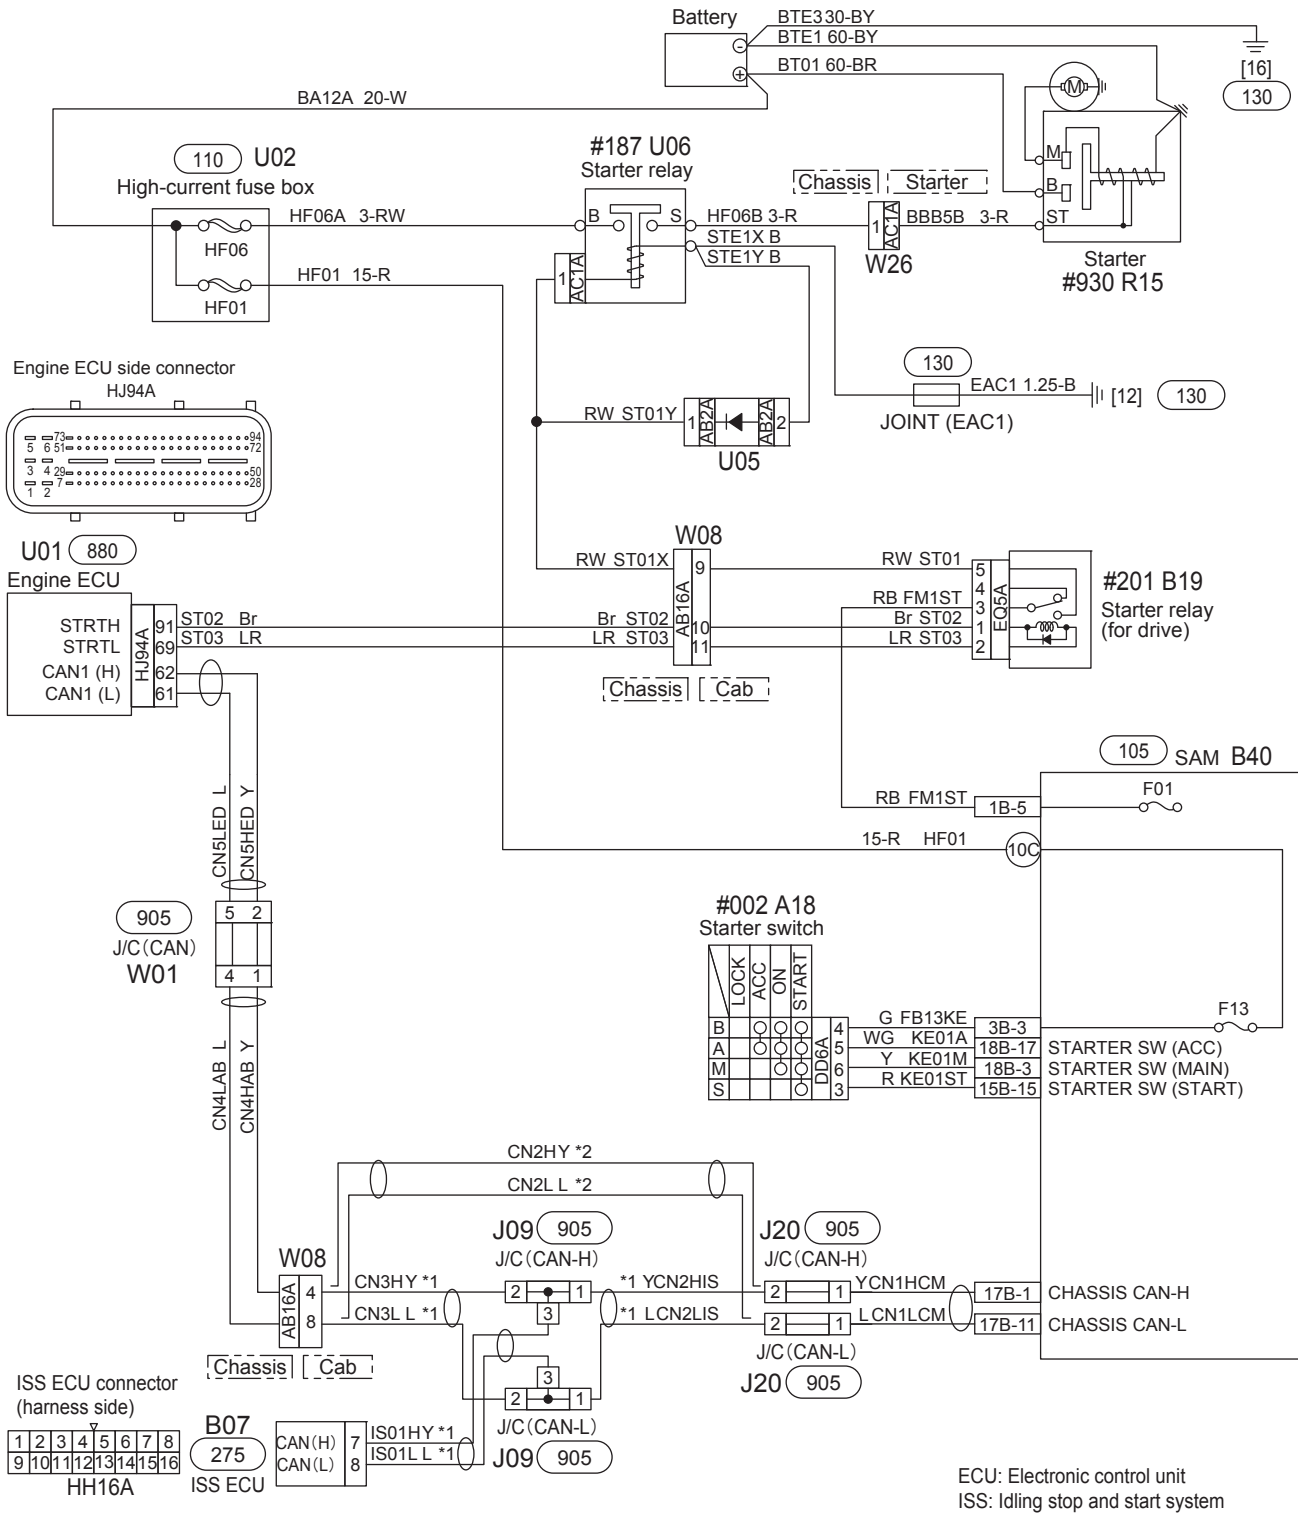

ECU: Electronic control unit
 ISS: Idling stop and start system


SAM connector (harness side)

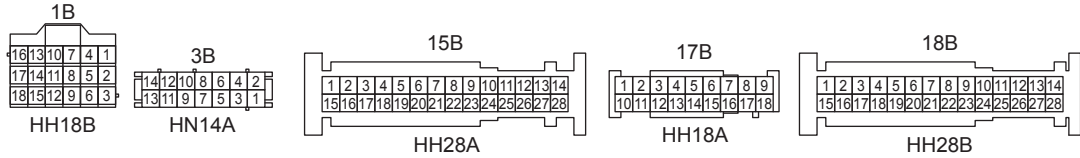


M E M O

275 ISS (IDLING STOP AND START SYSTEM) CIRCUIT

(1/2)

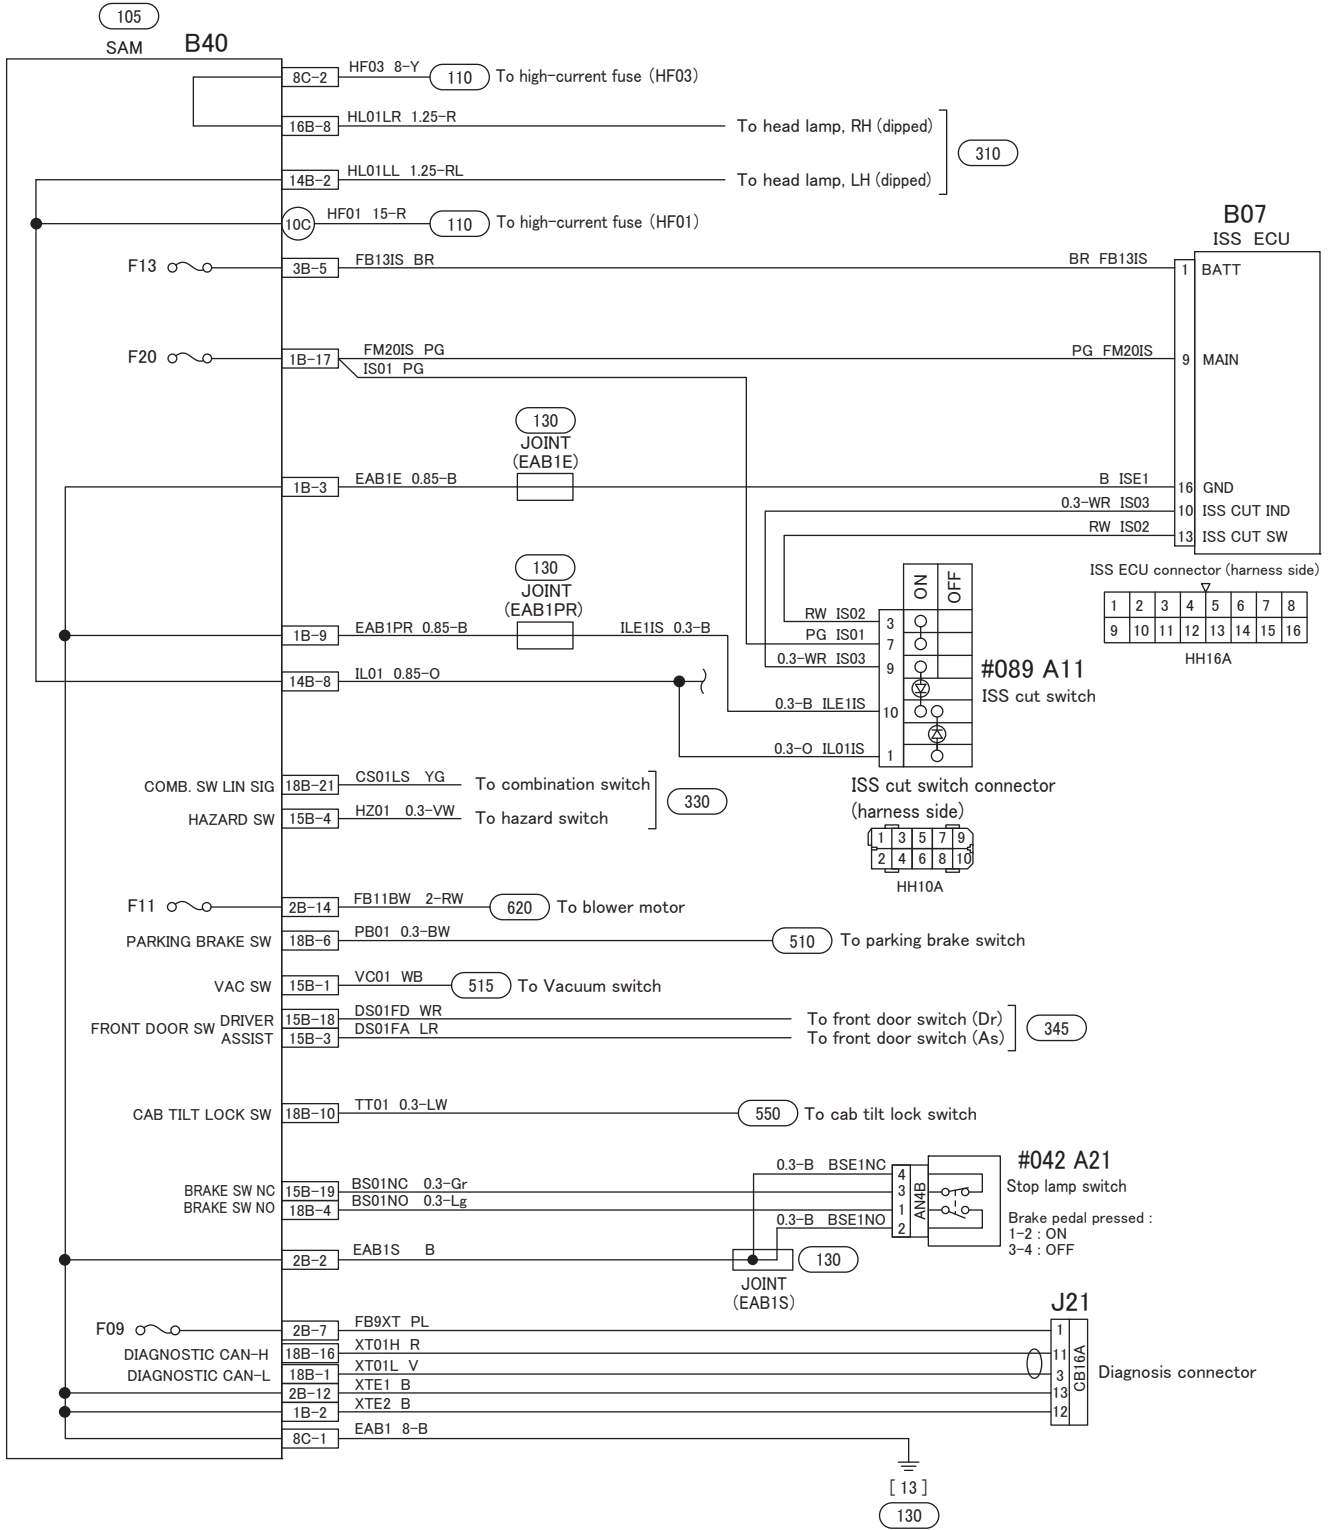


SAM connector (harness side)

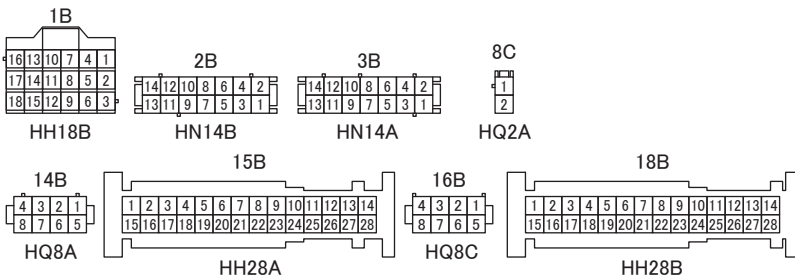

ECU : Electronic control unit
 ISS : Idling stop and start system
 Dr : Driver's seat side
 As : Assistant driver's seat side

(2/2)

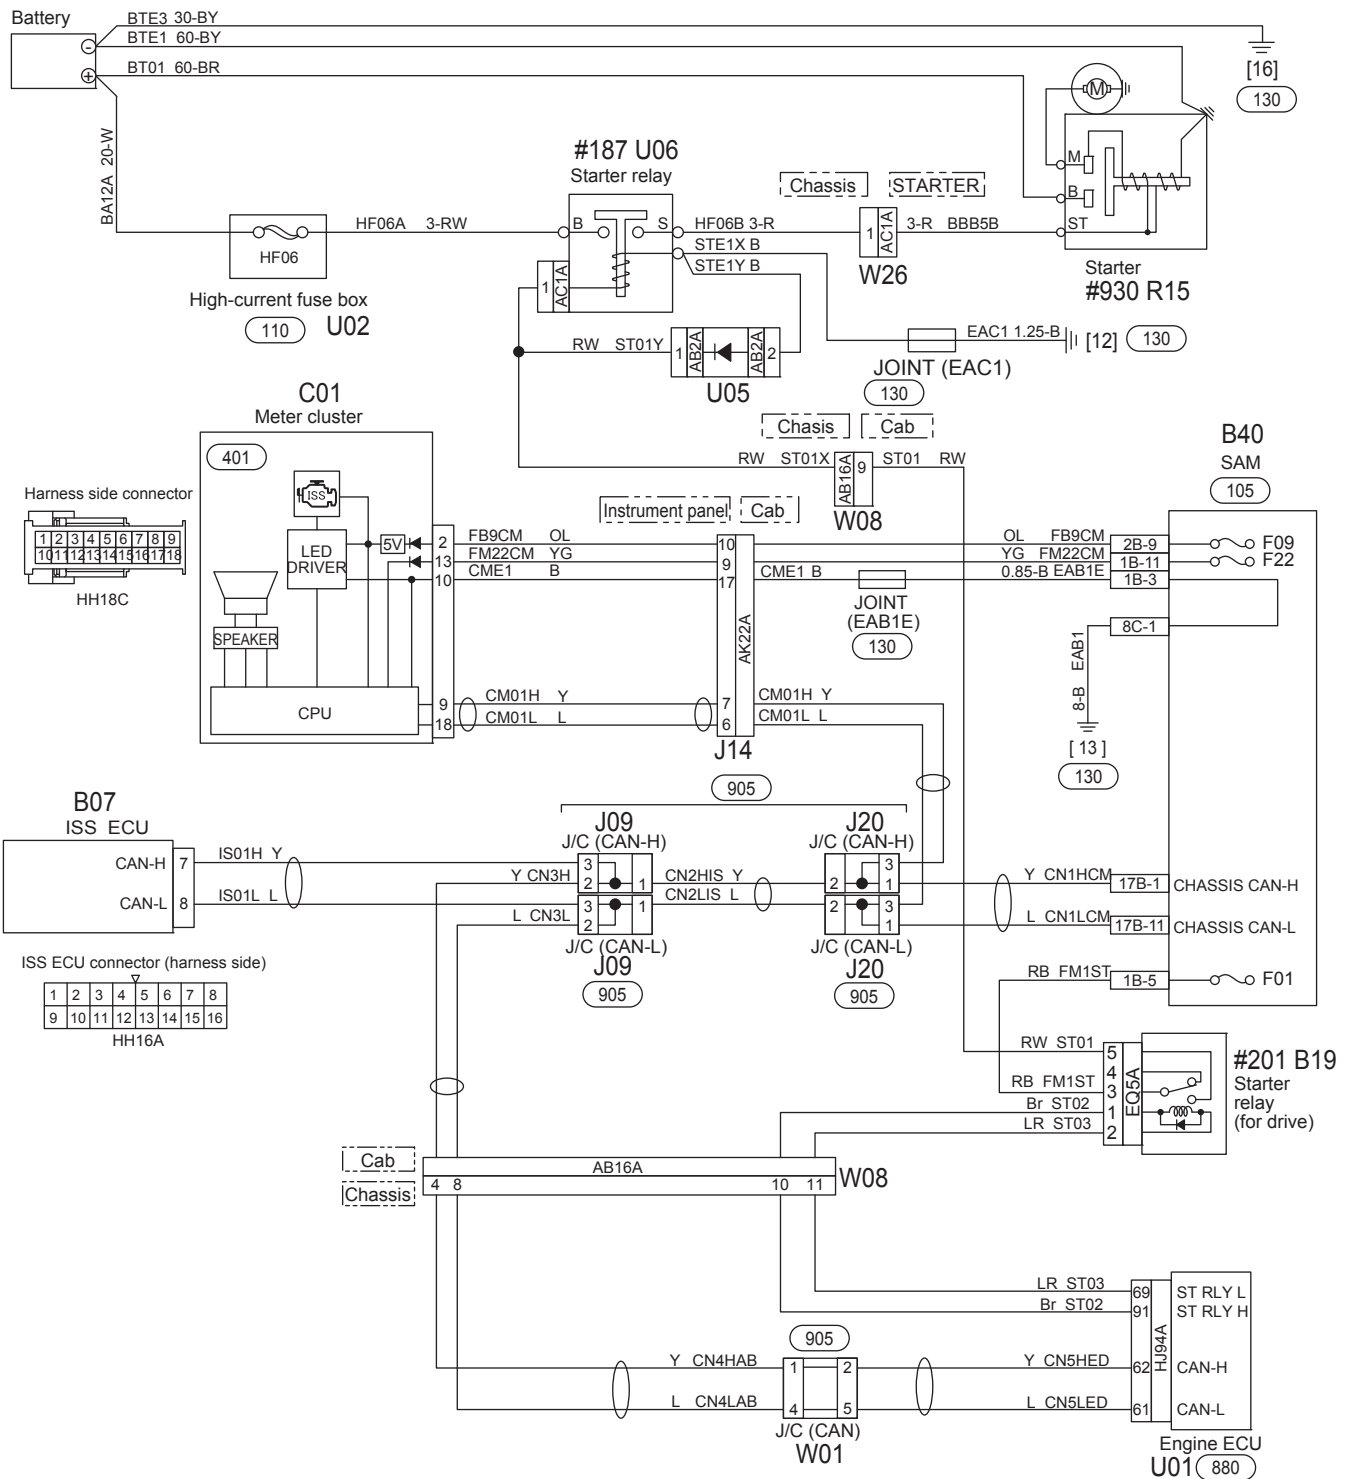

ECU: Electronic control unit
ISS: Idling stop and start system

Engine ECU side connector
HJ94A

SAM connector (harness side)

